


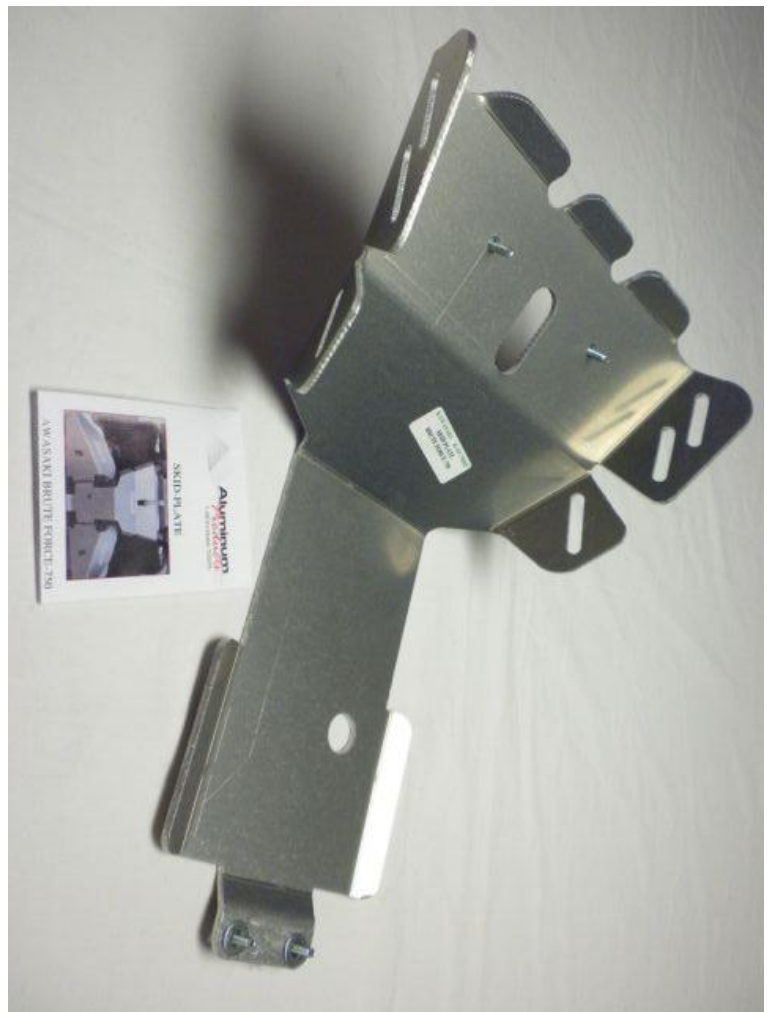

**KAWASAKI BRUTE FORCE  
K-SP-650 08-09 & 750 05-07**



**INSIDE VIEW**

Aluminum Products skid plate (SP) is designed to fit with the stock plastic belly plates or our aluminum full belly skid plate (FBSP). If using with the stock plastic belly plates, just remove the front plastic skid plate. You will not need the stock hardware. Use the flanged head bolts provided. Install the top two bolts hand tight. If the SP is installed using the stock plastic belly plate, install the remaining two bolts along with the two spacer washers between the aluminum SP and the plastic belly plate in the two holes at the rear of the SP. If the SP is installed with our FBSP, the two spacer washers will not be used and the SP will lap over the FBSP where they join.

**THANK YOU FOR PURCHASING OUR PRODUCTS  
ENJOY YOUR RIDE**

[www.aluminumproducts.com](http://www.aluminumproducts.com)